



Caseback Markings

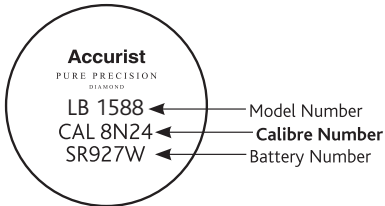

Quartz Analogue Operating Instructions

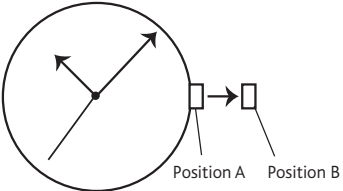

Please note: The seconds hand will not start moving until the crown has been returned to Position A.

To set the time:

1. Gently pull out crown to Position B.
2. Turn crown either way to correct time.
3. Push in crown to Position A.

Care of your watch

Avoid temperature extremes

1. Avoid leaving your watch in direct sunlight or in extremely warm conditions for long periods of time: this will cause malfunctioning and shorten the life of the battery.
2. Do not leave your watch for long periods of time in extremely cold places: this may cause your watch to gain or lose time. Should it begin to gain or lose time, place your watch on your wrist to restore its original accuracy.

Care of your watch continued ...

To set the time:

1. Gently pull out crown to Position B.
2. Turn crown either way to correct time.
3. Push in crown to Position A.

Avoid wet conditions

1. Do not operate the buttons when your watch is wet, even on models marked 'Water Resistant'.
2. Check case back markings and refer to the Resistance to water section.

Avoid strong shocks

1. This watch will withstand the bumps and jars normally incurred during sports activities.
2. Avoid dropping your watch on the ground or otherwise imparting severe shock to it.

Avoid strong magnetic fields

1. Keep your watch away from strong magnets.
2. Generally, your watch is not affected by magnetic fields from household appliances such as television sets and stereo equipment.

continued...

Care of your watch continued . . .

Avoid harmful chemicals, solvents & gases

1. Avoid wearing your watch in the presence of strong chemicals, solvents or gases.
2. Avoid materials such as gasoline, benzene, paint thinner, alcohol, spray cosmetics, nail polish, nail polish remover, adhesives or paint.

Periodic inspection

1. A regular 4 to 5 years service by an authorised Accurist technician will ensure trouble free operation.
2. Refer to the After Sales Service section for details.

continued...

IMPORTANT

1. Keep the batteries out of reach of infants and small children. Should accidental ingestion occur consult a doctor immediately.
2. Do not attempt to replace the battery yourself as this invalidates your guarantee.

Keep you watch clean

Wipe off any moisture that adheres to the case, glass or band with a soft, clean cloth.

Diamonds

All Accurist products conform to UN resolutions, the Kimberly Process and the Guarantee System. Accurist buys diamonds exclusively from legitimate sources not involved in funding conflict.

Resistance to water

INDICATIONS ON DIAL OR CASEBACK		LIGHT SPRAY, PERSPIRATION, LIGHT RAIN, ETC...	SWIMMING ETC...
DIAL	CASEBACK		
-	WATER RESISTANT	OK	X
WATER RESISTANT 50M (5 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 100M (10 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 150M (15 ATM) AND DEEPER	WATER RESISTANT	OK	OK

Resistance to water continued...

INDICATIONS ON DIAL OR CASEBACK		SKIN DIVING: DIVING WITHOUT AN AIR TANK
DIAL	CASEBACK	
-	WATER RESISTANT	X
WATER RESISTANT 50M (5 ATM)	WATER RESISTANT	X
WATER RESISTANT 100M (10 ATM)	WATER RESISTANT	OK
WATER RESISTANT 150M (15 ATM) AND DEEPER	WATER RESISTANT	OK

Resistance to water continued...

IMPORTANT - NEVER PULL OUT THE CROWN WHEN THE WATCH IS WET.

- Water resistance is not a permanent property. We strongly recommend you return your watch for resealing every 4 - 5 years and/or when changing batteries.
- "Water resistant" may sometimes be abbreviated as "Water resist" or "WR".
- We are unable to guarantee water resistancy if the watch has been serviced or repaired (including battery replacement) unless this has been carried out by an approved Accurist technician and confirmed as resealed to maintain water resistancy.
- Never pull out the crown when the watch is wet.
- Always set the crown in the normal position.